


Medicine cabinet finger pull

El boutiquín: Tirón de dedo

Prise digitale - Lârmoire à pharmacie


- Self-adhesive
Auto-adhésif
Auto adhesivo
- Clear Plastic
Plastico claro
Plastique clair

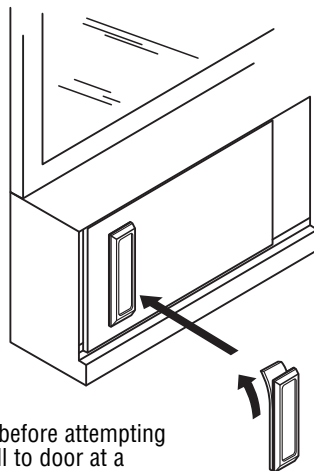

Clean surface of glass or any painted surface before attempting to apply pull. Remove paper backer, locate pull to door at a comfortable height, and press on to door. Maintain pressure for 30 seconds to assist in setting the pressure sensitive adhesive.

Nettoyez la surface en verre ou toute surface peinte, avant d'installer la pince. Retirez l'endos de papier, positionnez la prise digitale sur la porte à la hauteur désirée et appuyez. Maintenez la pression pendant 30 secondes, pour permettre l'adhérence.

Limpie la superficie del vidrio o cualquier superficie pintada, antes de instalar el tirón. Quite el reverso de papel, coloque el tirón en la puerta de acuerdo a la altura requerida y empuje. Mantenga la presión durante 30 segundos, para que se adhiera.

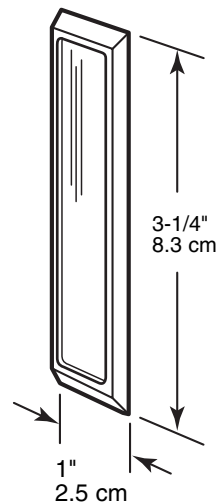

NOTE: Installation drawings are typical for this style of replacement part. They may not show a part identical to the one you are installing.

NOTA: Los dibujos para la instalación son genéricos para repuestos de este tipo; por lo que podrían no mostrar una pieza idéntica a la que usted esté instalando.

REMARQUE : Les dessins d'installation sont typiques pour ce style de pièce de rechange. Ils pourraient ne pas illustrer une pièce identique à celle que vous installez.

PRIME-LINE®

26950 San Bernardino Ave., Redlands, CA 92374